



datum  
link

# Datum Link App (v1.0.5)

for iPhone, iPad, Android, and Windows Devices

USER MANUAL

---

PRECISION. DATA. INNOVATION.

# Contents



## About Datum Link 2

|                         |   |
|-------------------------|---|
| App Overview            | 2 |
| Download & Installation | 3 |
| Permissions             | 3 |
| Support                 | 3 |

## Auger Hawk 4

|                     |   |
|---------------------|---|
| Setup               | 4 |
| Connection: Android | 4 |
| Connection: iOS     | 5 |
| Connection: Windows | 6 |
| Zero Offset         | 7 |
| Batteries           | 7 |

## Jobs and Logs 8

|                          |    |
|--------------------------|----|
| Creating Jobs and Logs   | 8  |
| Deleting Jobs and Logs   | 9  |
| Renaming Logs            | 10 |
| Configuring Log Metadata | 10 |
| Recording Logs           | 11 |
| Viewing Logs             | 11 |
| Viewing Live Data        | 11 |
| Reporting                | 12 |
| Exporting Data           | 13 |
| Manual Depth Counting    | 14 |

## Settings 15

|                          |    |
|--------------------------|----|
| Alarms & Warnings        | 16 |
| Customising the Home Tab | 17 |

## 425 Series 18

### Setup 18

|                                  |    |
|----------------------------------|----|
| Connection: Android (Wi-Fi)      | 19 |
| Connection: iOS (Wi-Fi)          | 20 |
| Connection: Windows (Wi-Fi)      | 21 |
| Connection: Windows (USB-Serial) | 22 |
| Zero Offset                      | 22 |

### Jobs and Logs 23

|                          |    |
|--------------------------|----|
| Creating Jobs and Logs   | 23 |
| Deleting Jobs and Logs   | 24 |
| Renaming Logs            | 25 |
| Configuring Log Metadata | 25 |
| Recording Logs           | 26 |
| Viewing Logs             | 26 |
| Viewing Live Data        | 26 |
| Reporting                | 27 |
| Exporting Data           | 28 |

### Settings 29

|                             |    |
|-----------------------------|----|
| Alarms & Warnings           | 30 |
| Device Settings: Wi-Fi      | 31 |
| Device Settings: USB-Serial | 32 |
| Customising the Home Tab    | 33 |

# About Datum Link



## App Overview

Datum Link is a professional application for live monitoring, reporting, and data export from Datum Electronics torque transducers.

 
Datum Link supports two sensor families, the **425 Series**, and the **Auger Hawk Series**, which includes the RADIX 8000 PTM.

This app replaces the Datum Connect and Datum Auger Hawk apps, and combines the features of both into a single, unified platform.



Supported Devices (Clockwise): M425, FF425, PTO, Auger Hawk, RS425

## Install, Connect, Monitor

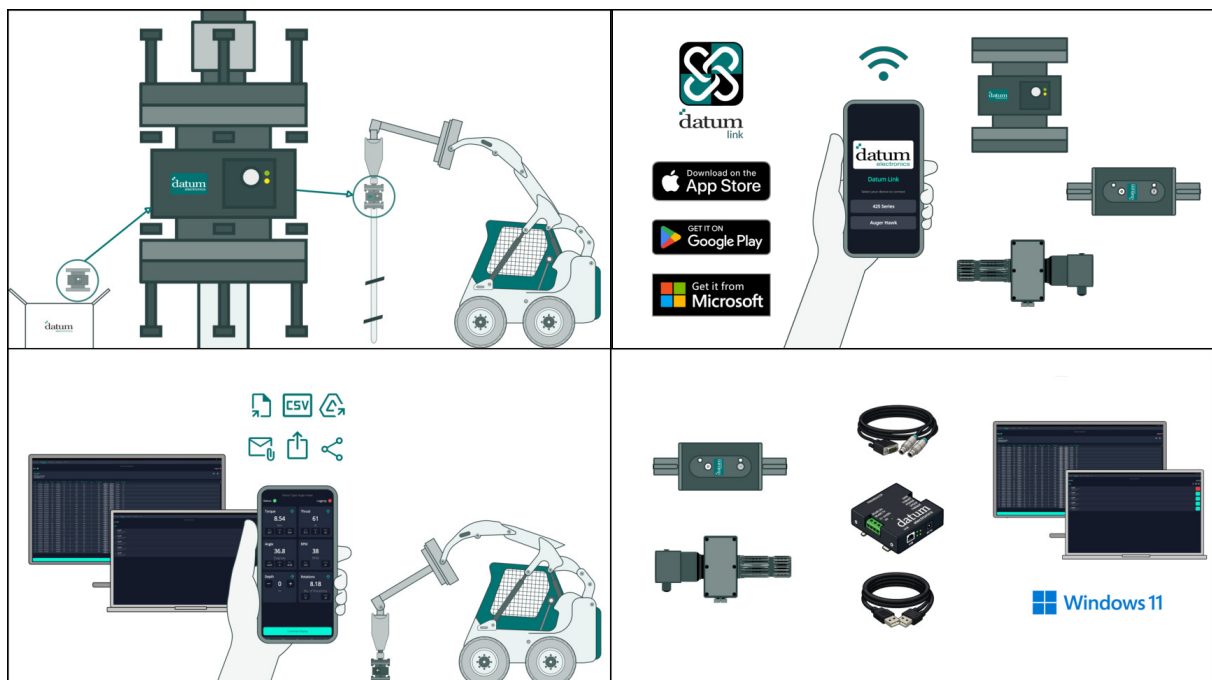

Datum Link offers wireless connection over Wi-Fi, and Serial Connection via USB for 425 Series Sensors


# About Datum Link

 ---



## Download & Installation

Datum Link is free of charge and available for download from the App Store for iPhone and iPad, as well as on Google Play for Android Devices, and the Microsoft Store for Windows 11 PCs.

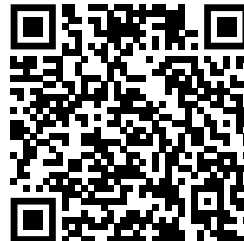

## Permissions

 
Datum Link requires the following permissions:

- **Location Services** – Optional for geolocation logging
- **Network Access** – Required for Wi-Fi device communication
- **Storage** – Required for log file management
- **USB-Serial** – Required for serial device communication (Windows only)

## Support

If you require assistance, our team are happy to help and can be reached by submitting a support ticket at [datum-electronics.com/support/](https://datum-electronics.com/support/) or by calling us on **+44 (0) 1983 282834**.

# Auger Hawk

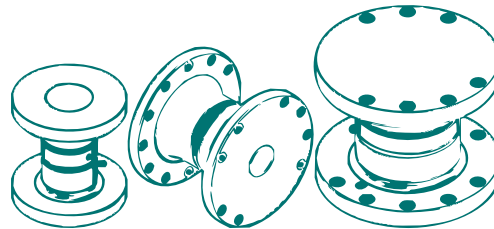


## Setup

Power on the Auger Hawk by pressing the button on the unit's transmitter.

Flashing green and amber LEDs indicate the unit is powered on.

 **NB:** the amber LED displays as partially red when the device is not connected.

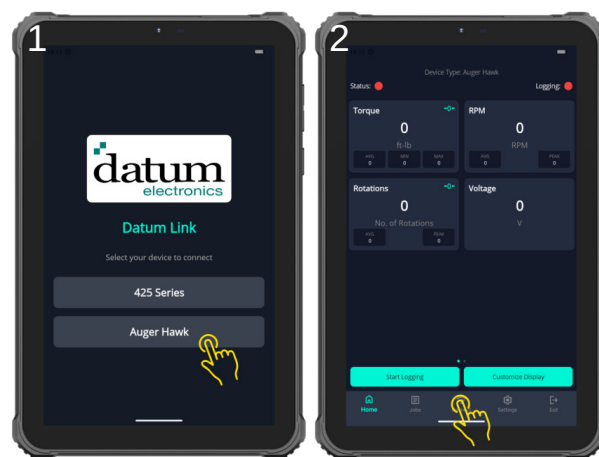

## Connection: Android

Open Datum Link and tap **Auger Hawk**<sup>1</sup>.

Tap Connect located in the bottom navbar<sup>2</sup> to display nearby Wi-Fi networks.

 
Tap Settings and select the SSID that reads **DATUM-** followed by a number<sup>3</sup>.

The top-left status icon will turn green to indicate a successful connection<sup>4</sup>. This may take up to two minutes.

**NB:** Android users may receive a notification asking them if they'd like to stay connected, tick **Don't ask again for this network** and then tap **Yes**<sup>5</sup>.



# Auger Hawk

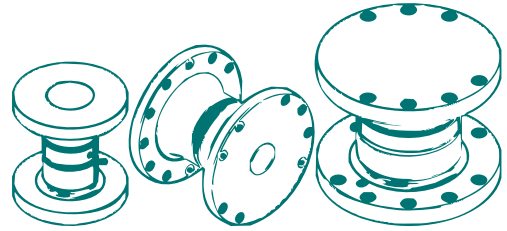

## Connection: iOS

Open Wi-Fi Settings on your iPhone or iPad to display nearby Wi-Fi networks.

 
 
 
 
 
 
Tap the SSID that reads **DATUM-** followed by a number<sup>1</sup>.

Wait for the Wi-Fi icon (📶) to appear in the top-right corner<sup>2</sup>. This may take up to two minutes.

Open Datum Link and tap **Auger Hawk**<sup>3</sup>.


You will receive system pop-ups regarding granting Datum Link permission to use your location and to find devices on your local network, select **Allow While Using App**<sup>4</sup> and **Allow**<sup>5</sup>.

The top-left status icon will turn green to indicate a successful connection<sup>6</sup>.

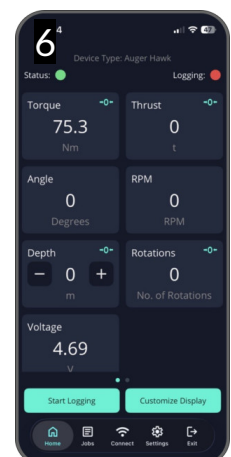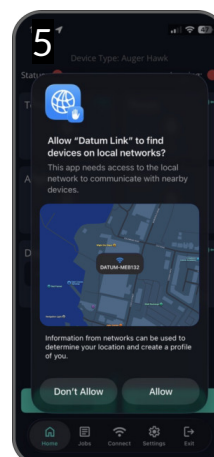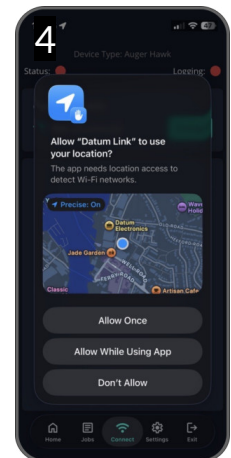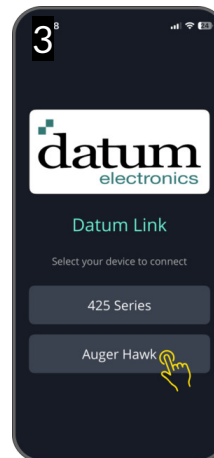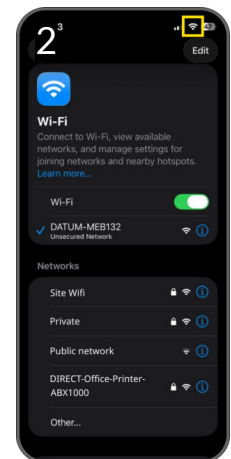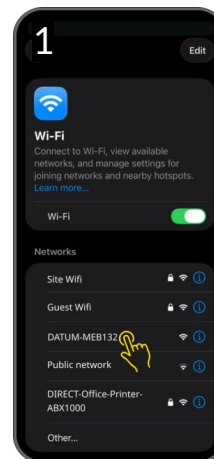



# Auger Hawk

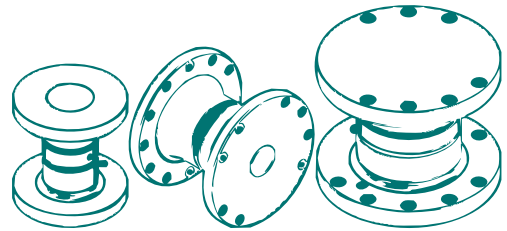 

## Connection: Windows

Open Datum Link and click **Auger Hawk**<sup>1</sup>.

Navigate to the Connect Tab located in the top navbar to display nearby Wi-Fi networks.

Click Settings, this will open Windows Settings: Network & Internet > Wi-Fi<sup>2</sup>.

 
 
 
 
 
Under *Show available networks*, select the SSID that reads **DATUM-** followed by a number<sup>3</sup>.

The top-left status icon will turn green to indicate a successful connection<sup>4</sup>. This may take up to two minutes.


**NB:** Windows Security pop-ups may ask for permission to allow Public and Private Networks to access the app – click Allow.

**NB:** Users experiencing firewall-related issues may need to visit **Windows Security > Firewall & network protection > Allow an app through firewall**.

Click  **Change settings** (may require Admin rights), scroll down to find Datum Link, then tick the box to its left, then click **Ok**<sup>5</sup>.

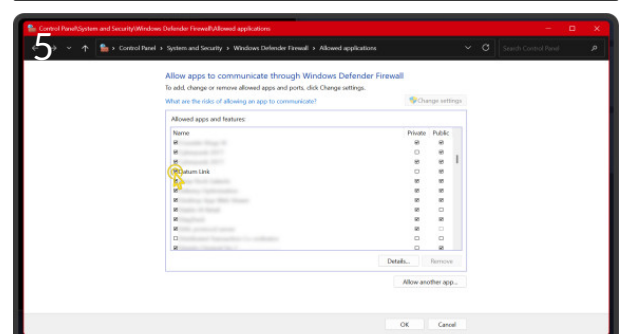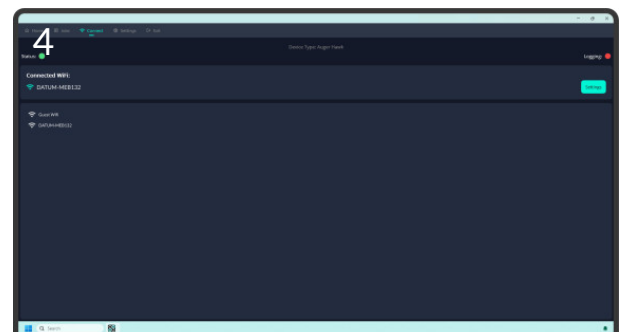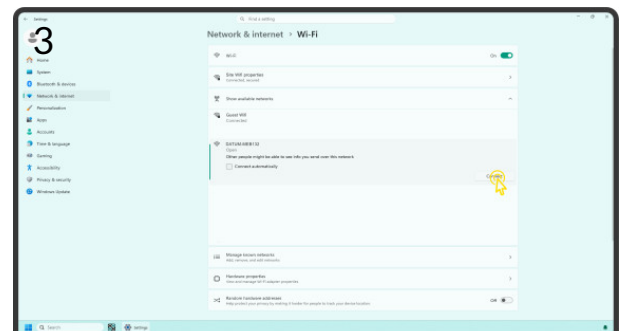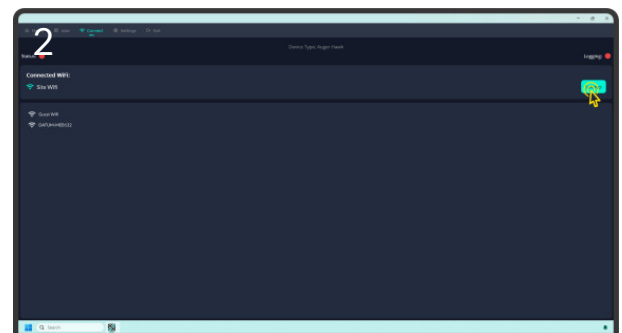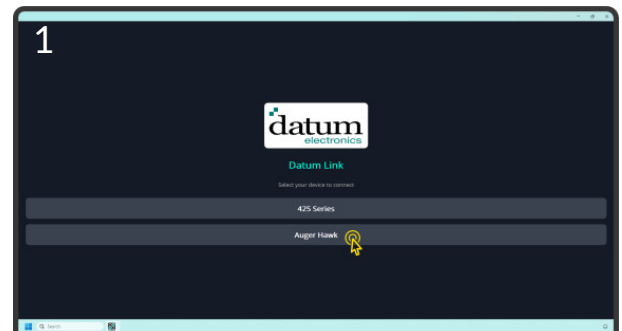


# Auger Hawk

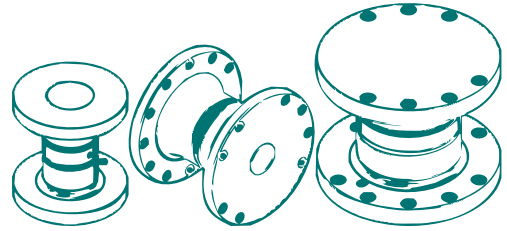 

## Zero Offset

Due to their nature as sensitive precision sensors, a small reading (noise) may be detected even when no load is applied.

 In the Home Tab, tap the Zero (→0←) icon<sup>1</sup> and select **OK**<sup>2</sup> to confirm the offset before starting measurements to ensure accurate torque values.

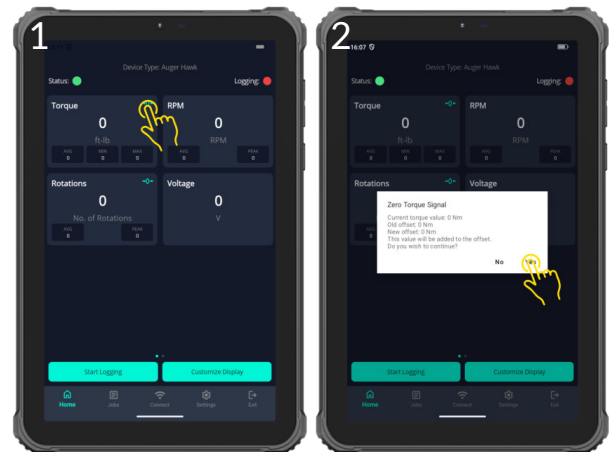


## Batteries

In the event that the Auger Hawk's transmitter is not powering on, consider replacing the batteries.

Unscrew and slide off the battery compartment's panel and replace with 4 x AA batteries. For best performance use 1.5V Lithium Ion Disulfides.

**NB:** the sensor does not turn off automatically, turn it off after use to preserve battery life.

 
If you require further assistance, our team can be reached at [datum-electronics.com/support/](https://datum-electronics.com/support/).

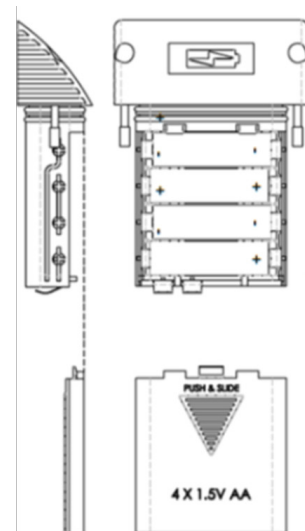

Auger Hawk transmitter  
battery compartment



# Auger Hawk


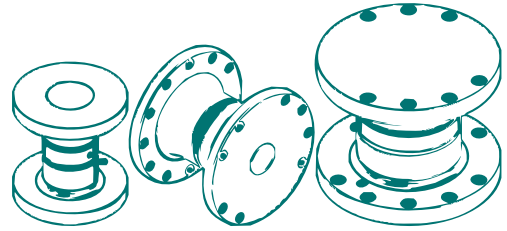 


## Jobs and Logs

The Jobs Tab handles Log management, allowing users to create an individual or series of Logs, which can then be exported as Data Files, or used to generate PDF reports.

Logged data includes:

  - Torque
- Thrust
- Angle
- RPM
- Rotations
- Voltage
- Depth (manual counter)
- GPS co-ordinates
- GPS accuracy (Metre radius)
- Date/Time

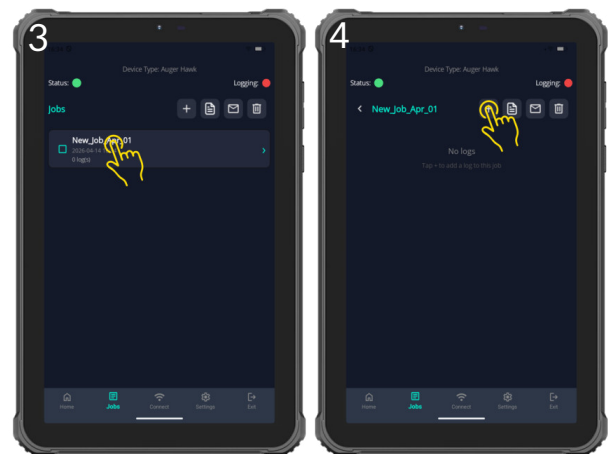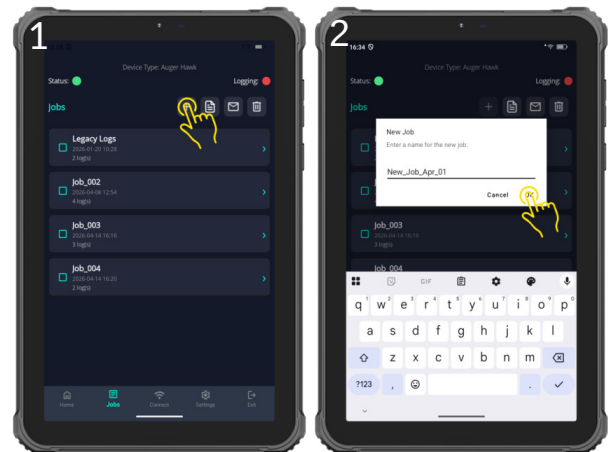


## Creating Jobs and Logs


To create a Job, tap the plus icon (+)<sup>1</sup>, enter a name, and select **OK**<sup>2</sup>.

To create a Log, select the Job<sup>3</sup>, tap the plus icon<sup>4</sup>, enter a name, and select **OK**.

 Jobs and Logs can also be created from the Home Tab by tapping the **Start Logging** button<sup>5</sup>. Any existing Jobs and Logs can also be selected in this way<sup>6</sup>.

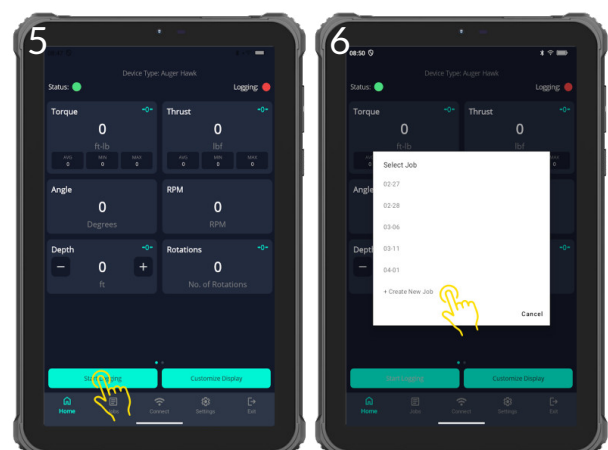

# Auger Hawk

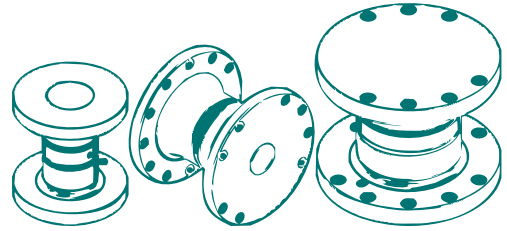 




## Deleting Jobs and Logs

To delete a log, tap the bin icon (  )<sup>1</sup>, then confirm with **Delete**<sup>2</sup>.


Multi-select<sup>3</sup> allows users to delete multiple logs at the same time.

To delete a Job, select its checkbox<sup>4</sup> before tapping the bin icon (  )<sup>5</sup>.

   Deleting a Job will also delete all its corresponding Logs. Confirm with **Delete**<sup>6</sup>.

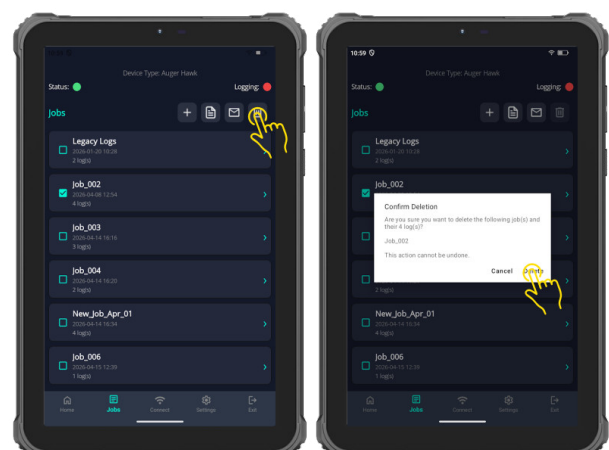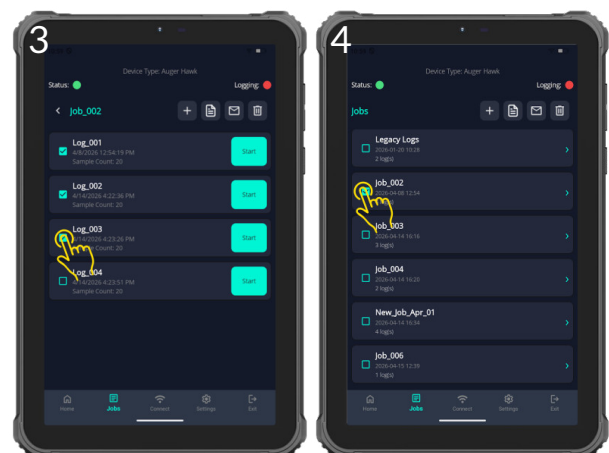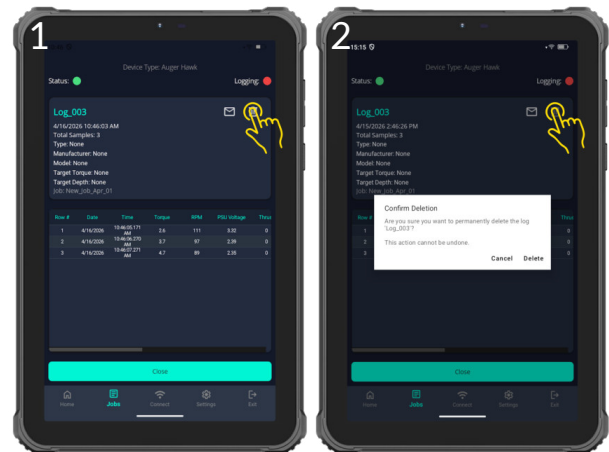

# Auger Hawk

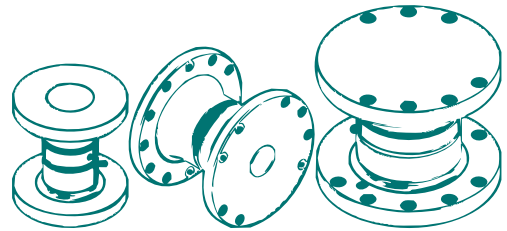 

## Renaming Logs

To rename a Log, select its name<sup>1</sup> to bring up the editor. Finalise your changes with the tick icon<sup>2</sup> (✓).

## Configuring Log Metadata

Log Metadata provides descriptive information about a Log for reporting and reference purposes.

 
 
 
Configurable Metadata includes:

- Type
- Manufacturer
- Model
- Target Torque
- Target Depth


To edit Log Metadata, tap on its existing values<sup>3</sup> and confirm your changes with the tick icon<sup>4</sup> (✓).

NB: Targets set in Log Metadata are for reporting purposes<sup>5</sup> only and do not affect alarm settings.

For alarm configuration, see [Alarms & Warnings](#) on page 14.

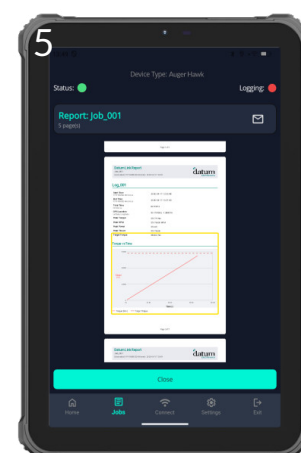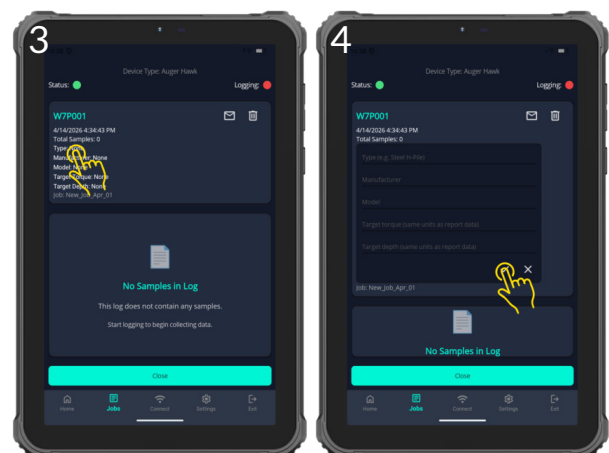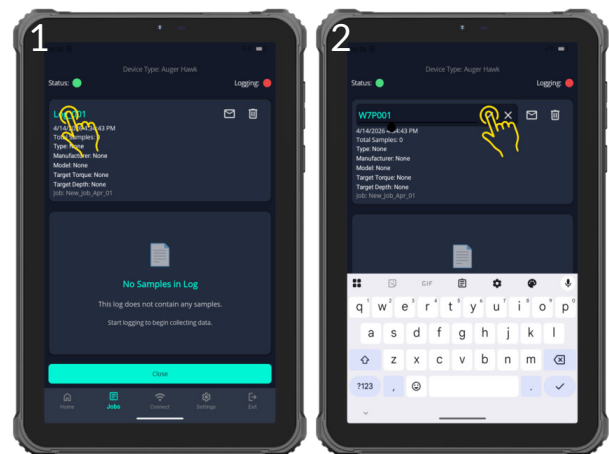

# Auger Hawk

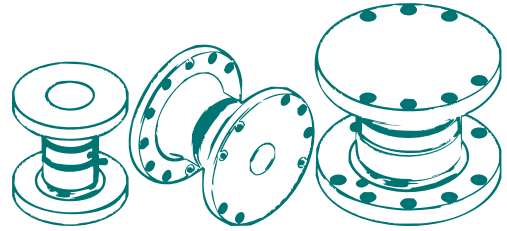 


## Recording Logs

Tap the **Start** button<sup>1</sup> to begin logging.

The top-right Logging icon will turn green while logging is active.

To stop logging, tap the **Stop** button<sup>2</sup>.

 
Logs can be resumed at any time.

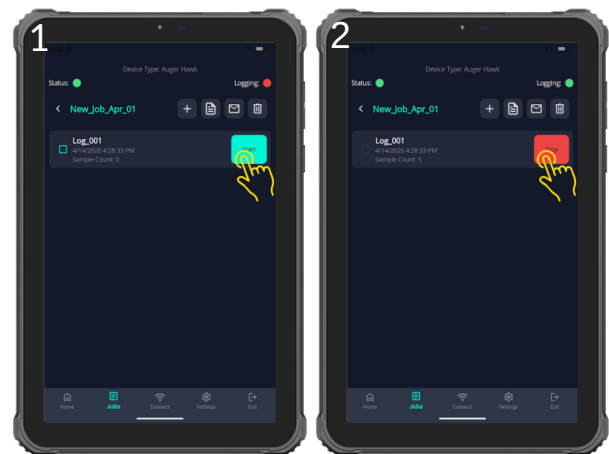

## Viewing Logged Data

Logged data is displayed underneath the Log name and metadata<sup>3</sup>.

 This cannot be viewed while the Log is active<sup>4</sup>.

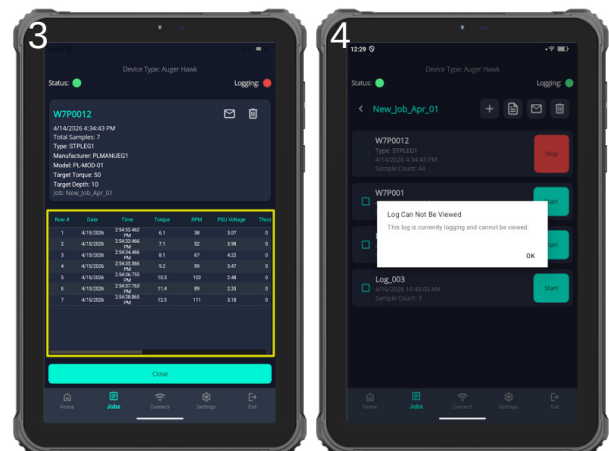


## Viewing Live Data

Live data can be viewed on the Home Tab<sup>5</sup>.

Swipe left to view data in Graph View<sup>6</sup>.



 
# Auger Hawk

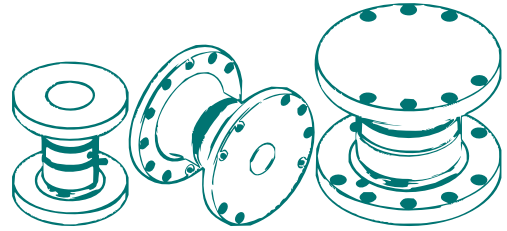

## Reporting


Reports can be generated for individual Logs, or for all Logs within a Job.

 To generate a Job Report, tap the Report icon (📄)<sup>1</sup>. This will generate Report preview which can be scrolled through by the user.

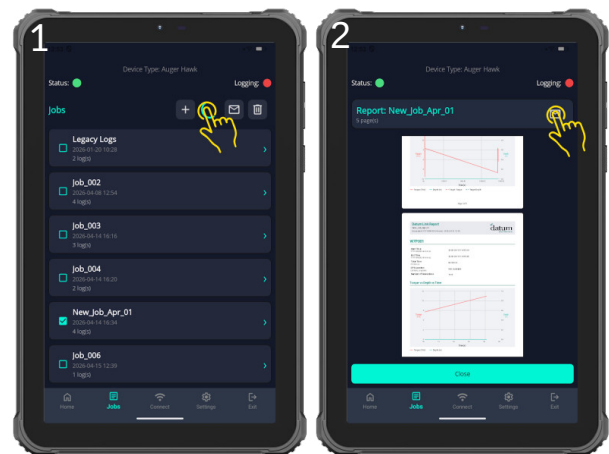

To export the .pdf Report, tap the Email icon (✉️)<sup>2</sup>.

 
For Android devices this will bring up the Share menu, enabling users to choose whether their Report is exported via Email, cloud storage, or to nearby devices using Bluetooth<sup>3</sup>.

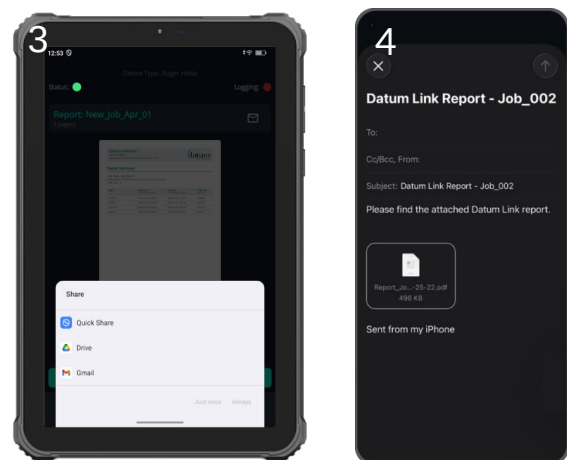

iOS and Windows devices will open the default email browser<sup>4</sup>.


To generate Log Reports individually, use the checkboxes to select your chosen Logs<sup>5</sup>.

 This generates a Report using only those Logs selected<sup>6</sup>.

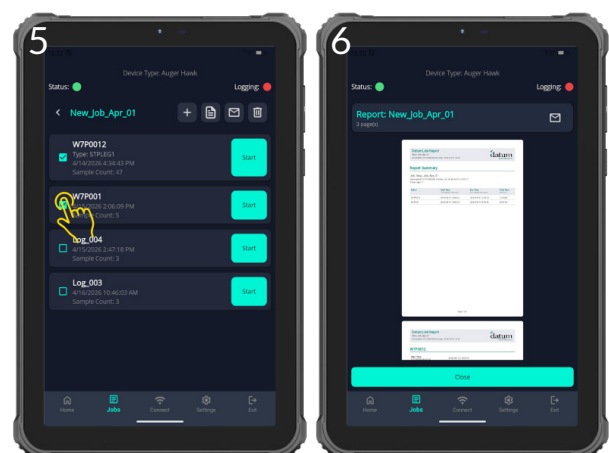

**NB:** As the system connects over Wi-Fi, you'll need to disconnect unless your device supports simultaneous use of Wi-Fi and mobile data.

# Auger Hawk

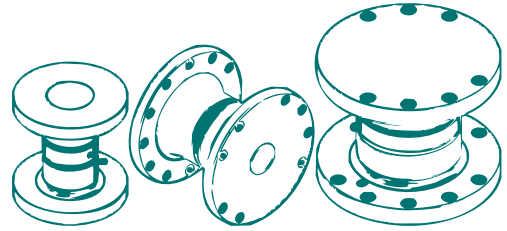 

## Exporting Data Files

 
Datum Link enables users to export their data as .csv or .ssv files, which can then be opened on any device running modern spreadsheet applications such as Microsoft Excel and Google Sheets.

To export data, tap the Email icon (✉️)<sup>1</sup>.




Data Files can be exported from individual Logs, multiple selected Logs<sup>2</sup>, or from all Logs within a Job<sup>3</sup>.

For Android devices this will bring up the Share menu, enabling users to choose whether their files are exported via Email, cloud storage, or to nearby devices using Bluetooth<sup>4</sup>.

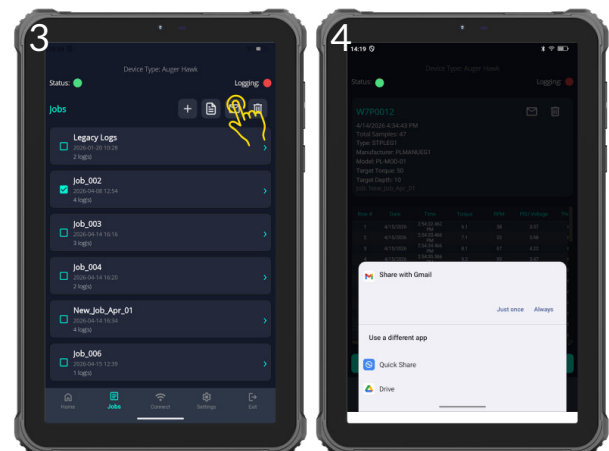


iOS and Windows devices will open the default email browser<sup>5</sup>.

 **NB:** As the system connects over Wi-Fi, you'll need to disconnect unless your device supports simultaneous use of Wi-Fi and mobile data.

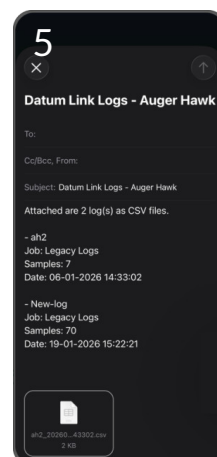



# Auger Hawk

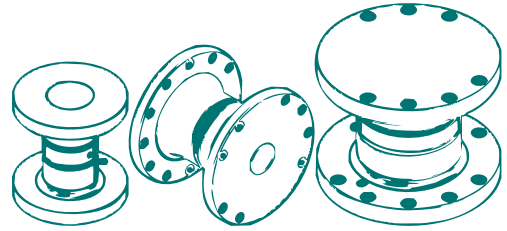 

## Manual Depth Counting

 
Datum Link allows you to manually add pile depth data to the active Log.

To add depth data, tap the plus icon (+) on the Home Tab<sup>1</sup>.


Depth is added in increments of 0.5 metres (500 cm) or 0.5 ft (6 inches) depending on the user settings.

The depth data can be viewed in Graph View<sup>2</sup>, in the Log itself<sup>3</sup>, and in exported Data Files.

Depth also features in generated Reports<sup>4</sup>, where it can be compared against the Target Depth added to the Log's metadata.

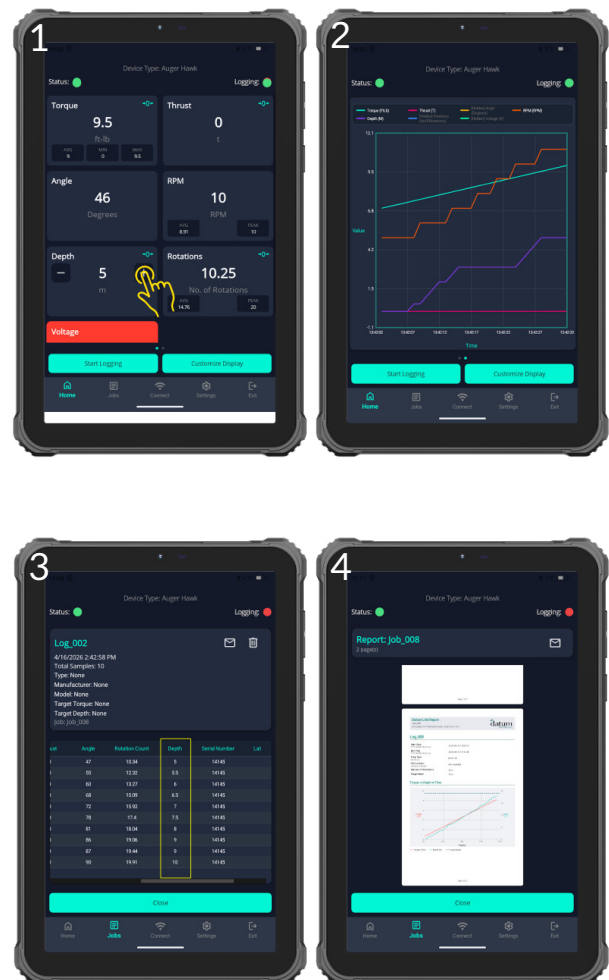

# Auger Hawk

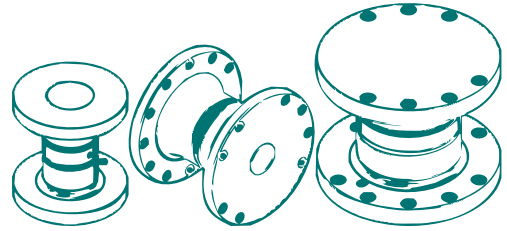 

## Settings

The Settings Tab lets you customise the behaviour of Datum Link<sup>1</sup>.

### Graph Time Window<sup>2</sup>

Adjusts the length of time displayed on the Home Tab's Graph View.

### Logging Interval<sup>3</sup>

By default set to every 1 second, can be changed to every 5 or 10 seconds.

### Log Location<sup>4</sup>

Activates the location tracking feature to log your device's coordinates.

 
 
 
### Export Format<sup>5</sup>

Tap to select either .csv or .ssv as your chosen export file format.


### Report Image<sup>6</sup>

Allows the user to upload a custom image to feature in Report headers.

We recommend using .png files for supported transparency, though other standard image formats are accepted.

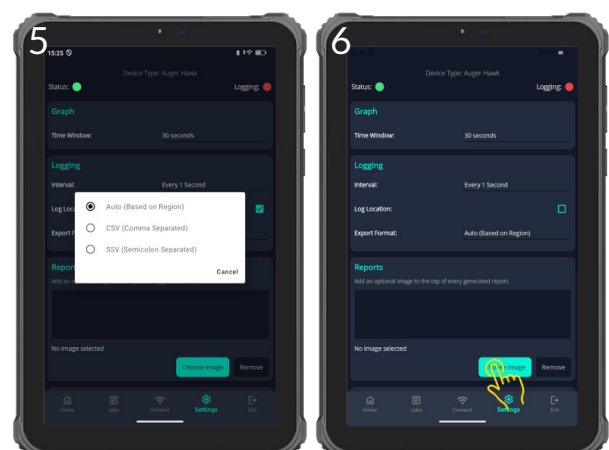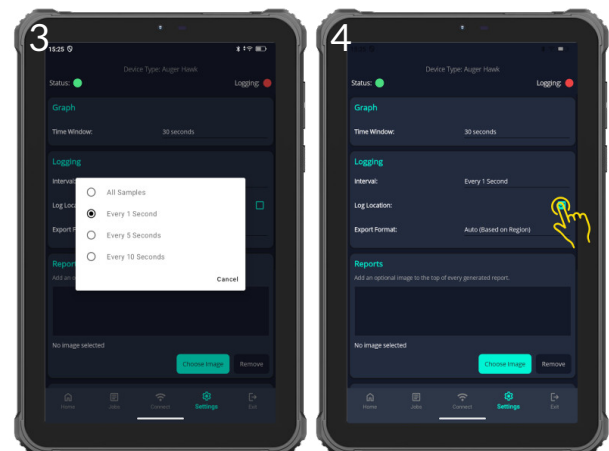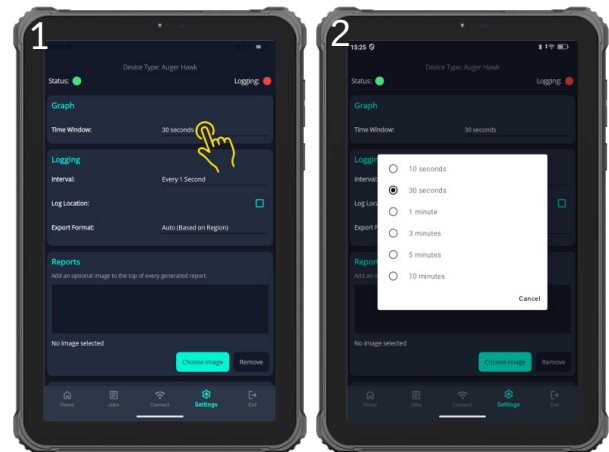

# Auger Hawk

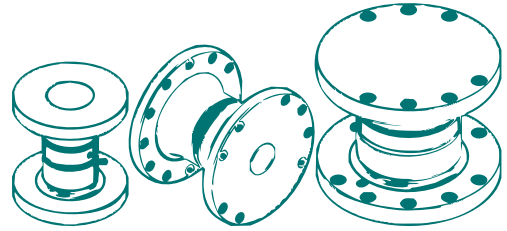 

## Alarms & Warnings

These settings enable you to configure on device alerts that are designed to help prevent potential harm to personnel and equipment.

Settings include:

### On/Off Toggle<sup>1</sup>

Activates and deactivates the alert.

### Volume Slider<sup>2</sup>

Adjusts the volume of the alert.

### Warning Value<sup>3</sup>

Displays an amber warning on the Home Tab when the value is met.

 
 
 
### High Value<sup>4</sup>

Displays a red warning on the Home Tab and plays an audible alarm when the value is met.


### Reset Button<sup>5</sup>

Resets the warning and high values of each alert.

**NB:** Please ensure your device is not muted or the volume is not too low as this will affect the volume of the alarm.

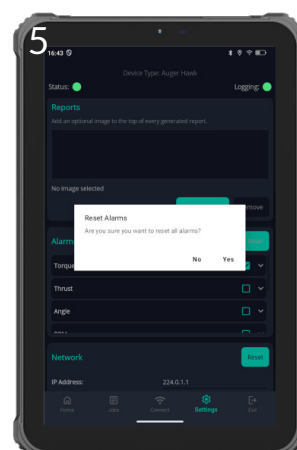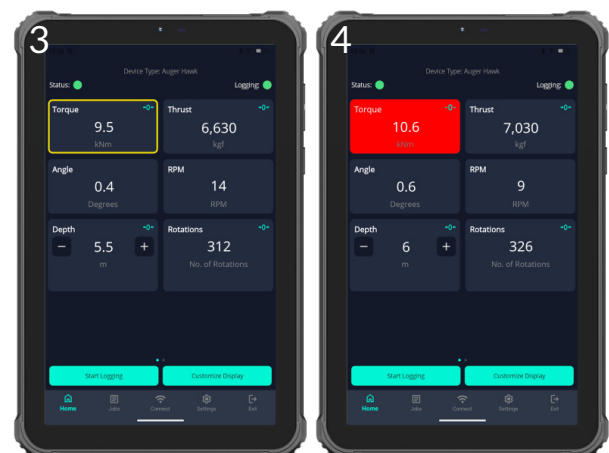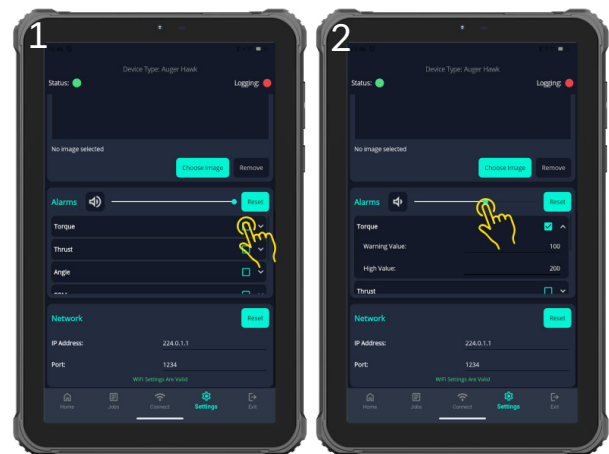

# Auger Hawk

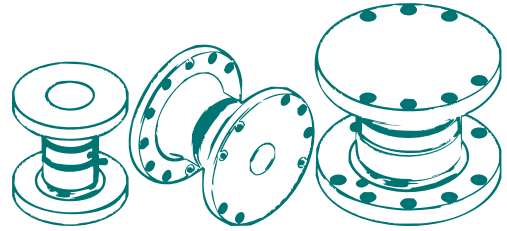 

## Customising the Home Tab

The Home Tab can be customised in the following ways:

**Data Cards** can be rearranged with hold and drag gestures<sup>1</sup>.

**Graph View** data series can be hidden by tapping on the series name<sup>2</sup>.

Tapping the **Customize Display** button opens Data Card settings and controls<sup>3</sup>.

**On/Off Toggle**<sup>4</sup>  
Adds or removes the data card.

 
 
**Change Units**<sup>5</sup>  
Choose from a range of metric and imperial units.

**Decimal Places**  
Adjusts the number of decimals places.


**Show Average**  
Displays the average value.

**Average Duration (s)**<sup>6</sup>  
Sets the period of time in seconds for which the average is calculated.

**Show Peak**  
Displays the peak values.

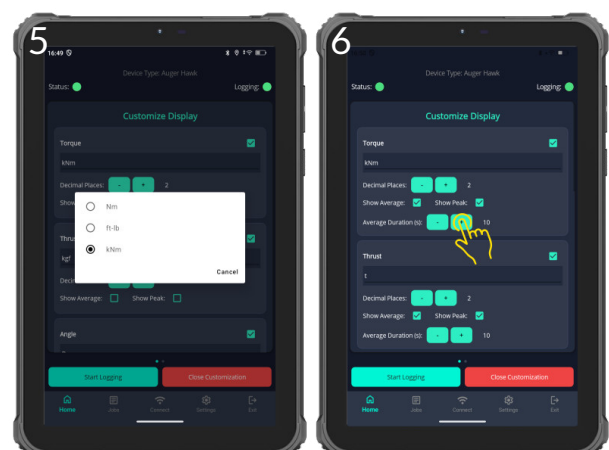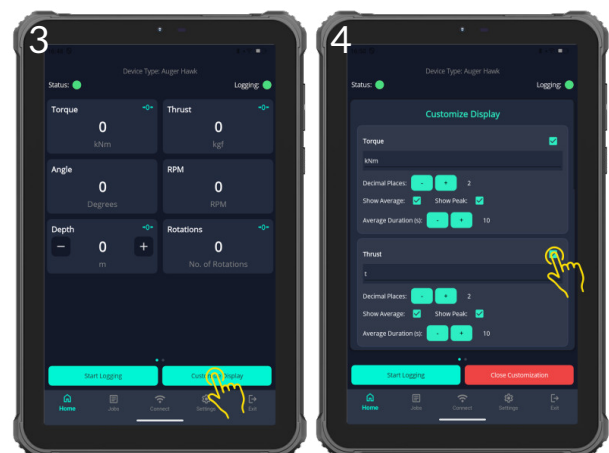

# 425 Series

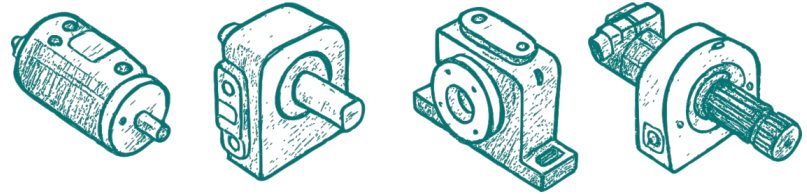 


## Setup

Ensure the Datum Connect Interface Unit (DCI) is connected to mains power using the DCI Power Supply Unit (PSU).

Connect the 425 Series Sensor to the DCI via the DCI Cable.

Green LEDs on the DCI and the sensor indicate they are powered on.

 For more information on LED status please consult your sensor's User Manual.

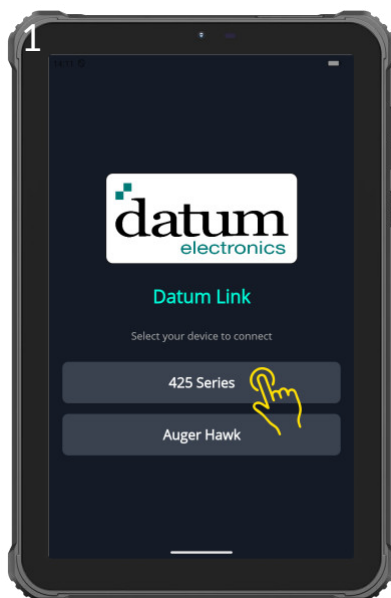

Open Datum Link and select **425 Series**<sup>1</sup>.

## Components Involved



*Datum 425 Series Torque Transducers*



*The Datum Connect Interface (DCI) and PSU*



*DCI Cable for DCI to sensor connection*




*USB 2.0 Type-A to Type-B cable for wired connection to Windows 11 PCs*



*PTO Connect Cable for DCI to sensor connection (425 Series PTO Monitor only)*
 
# 425 Series

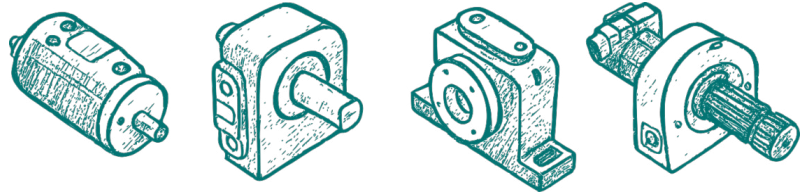

## Connection: Android (Wi-Fi)

 
 
Select the Connect Tab located in the centre of the bottom navbar<sup>1</sup>.

This tab displays nearby Wi-Fi networks.

Tap Settings and select the SSID that reads **DC** followed by a number<sup>2</sup>.


The top-left status icon will turn green to indicate a successful connection<sup>3</sup>.

You may receive a notification that the network has no internet access. This is typical operation and can be ignored<sup>4</sup>.

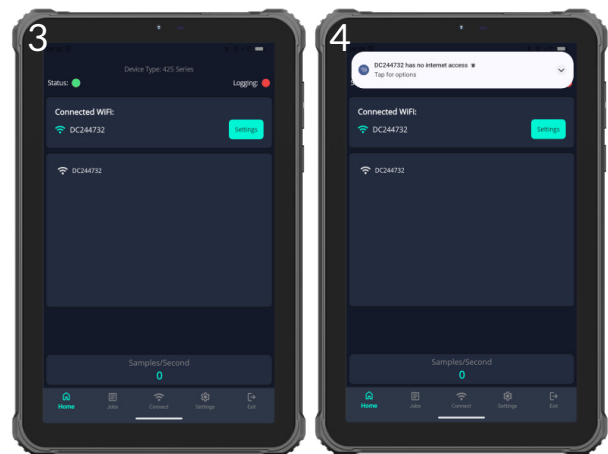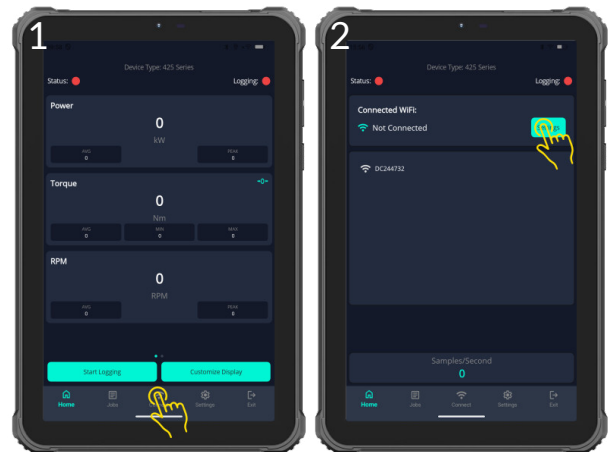



# 425 Series

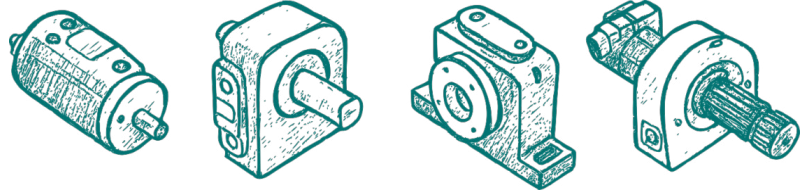 

## Connection: iOS (Wi-Fi)

Open Wi-Fi Settings on your iPhone or iPad to display nearby Wi-Fi networks.

 
 
 
 
 
 
Tap the SSID that reads **DC-** followed by a number<sup>1</sup>.

Wait for the Wi-Fi icon (📶) to appear in the top-right corner<sup>2</sup>. This may take up to two minutes.


Open Datum Link and tap **425 Series**<sup>3</sup>.

You will receive system pop-ups regarding granting Datum Link permission to use your location and to find devices on your local network, select **Allow While Using App**<sup>4</sup> and **Allow**<sup>5</sup>.

The top-left status icon will turn green to indicate a successful connection<sup>6</sup>.

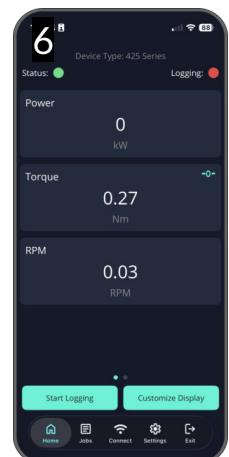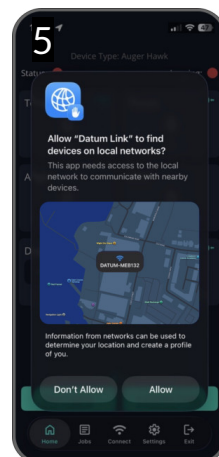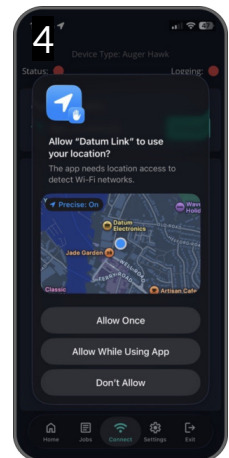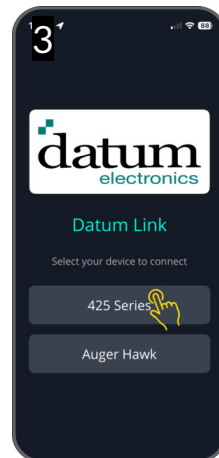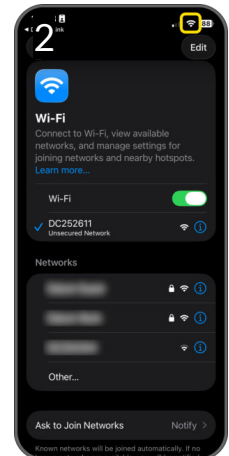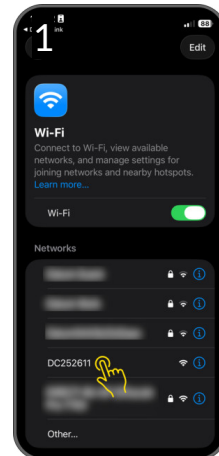

# 425 Series

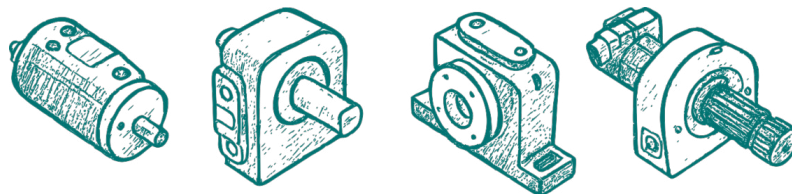 

## Connection: Windows (Wi-Fi)

Open Datum Link and click **425 Series**<sup>1</sup>.

Navigate to the Connect Tab located in the top navbar<sup>2</sup> to display nearby Wi-Fi networks.

Click Settings, this will open Windows Settings: Network & Internet > Wi-Fi<sup>2</sup>.

 
 
 
 
 
Under *Show available networks*, select the SSID that reads **DC** followed by a number<sup>3</sup>.

The top-left status icon will turn green to indicate a successful connection<sup>4</sup>. This may take up to two minutes.


**NB:** Windows Security pop-ups may ask for permission to allow Public and Private Networks to access the app – click Allow.

**NB:** Users experiencing firewall-related issues may need to visit **Windows Security > Firewall & network protection > Allow an app through firewall**.

Click  Change settings (may require Admin rights), scroll down to find Datum Link, then tick the box to its left, then click **Ok**<sup>5</sup>.

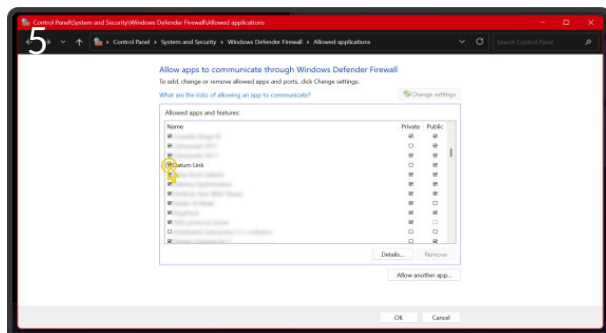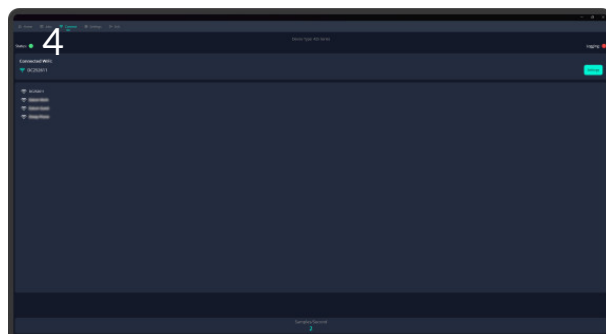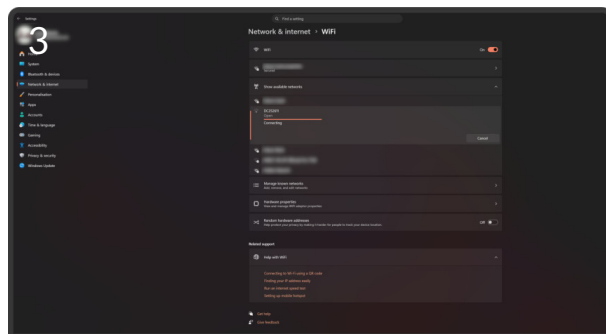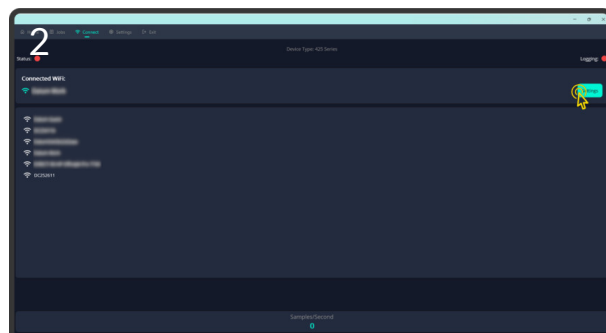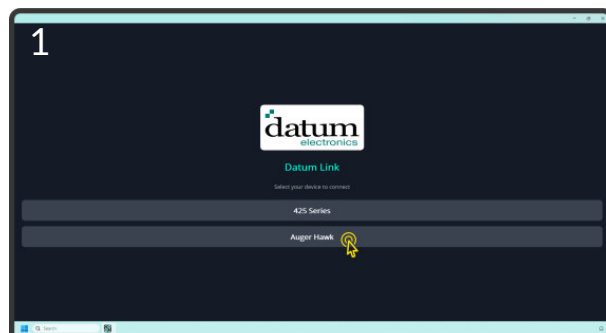

# 425 Series

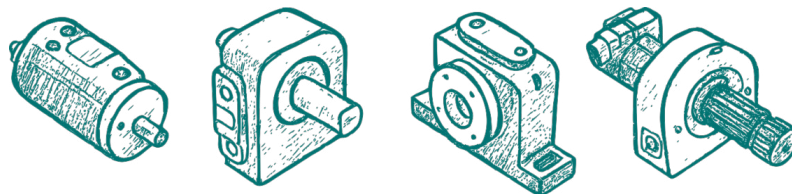 




## Connection: Windows (USB-Serial)

In the Settings Tab, set Connection Type to Serial<sup>1</sup>.

In the Connect Tab, you'll likely see the sensor as **COM** followed by a number.

If you're unsure, disconnect and reconnect the USB to confirm the device name.

   
Select Connect<sup>2</sup> and the status icon will turn green to indicate a successful connection<sup>3</sup>.

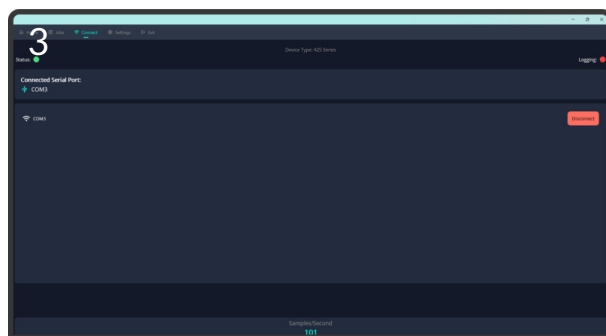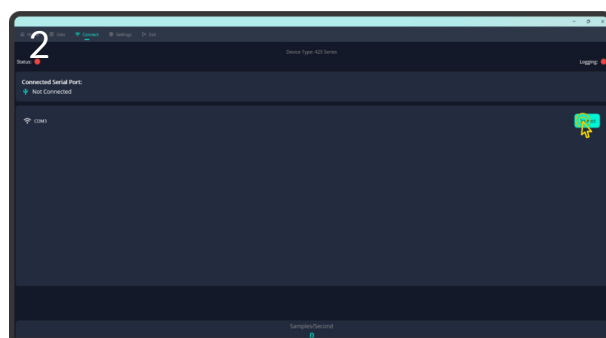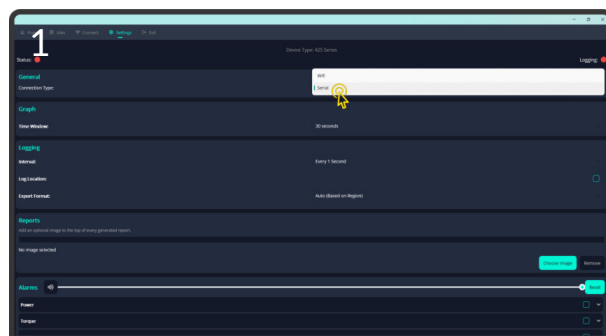


## Zero Offset

Due to their nature as sensitive precision sensors, a small reading (noise) may be detected even when no load is applied.

 In the Home Tab, tap the Zero (→0←) icon<sup>1</sup> and select **OK**<sup>2</sup> to confirm the offset before starting measurements to ensure accurate torque values.

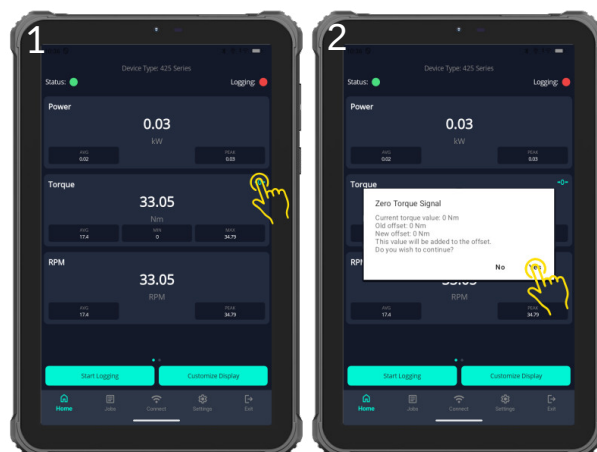

# 425 Series

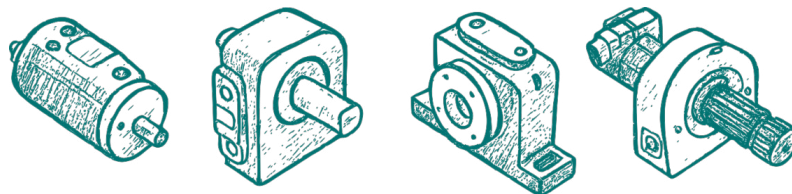 



## Jobs and Logs

The Jobs Tab handles Log management, allowing users to create a series of connected Logs.

These can be exported as .csv or .ssv files, or used to generate PDF reports.

Logged data includes:

  - Torque
- RPM
- Power
- Torque Analog
- Speed Analog
- Power Analog
- GPS co-ordinates
- GPS accuracy (Metre radius)
- Date/Time

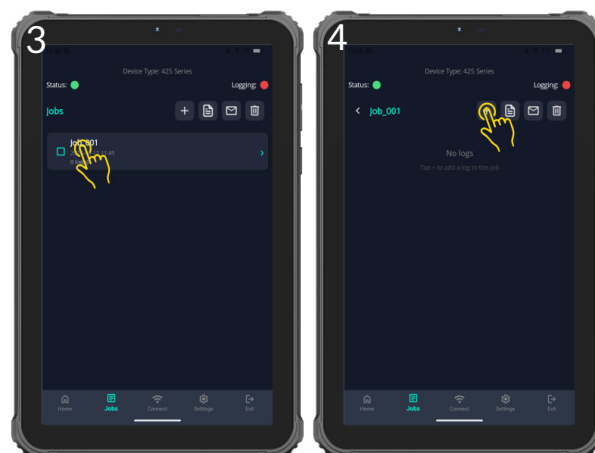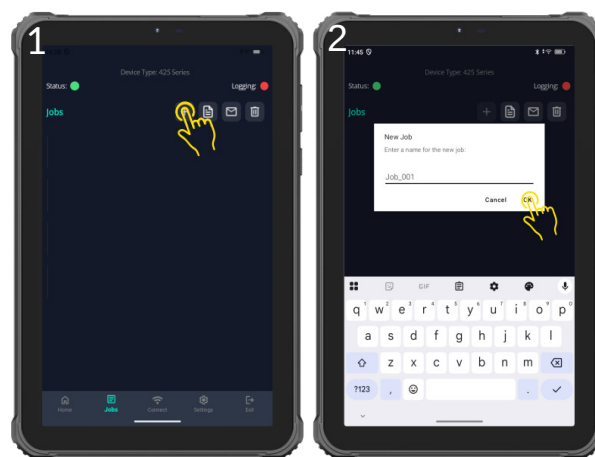


## Creating Jobs and Logs


To create a Job, tap the plus icon (+)<sup>1</sup>, enter a name, and select **OK**<sup>2</sup>.

To create and manage Logs, select the Job<sup>3</sup>, tap the plus icon<sup>4</sup>, enter a name, and select **OK**<sup>5</sup>.

 Tap on the Log's name to view its data and set its profile for reporting<sup>6</sup>.

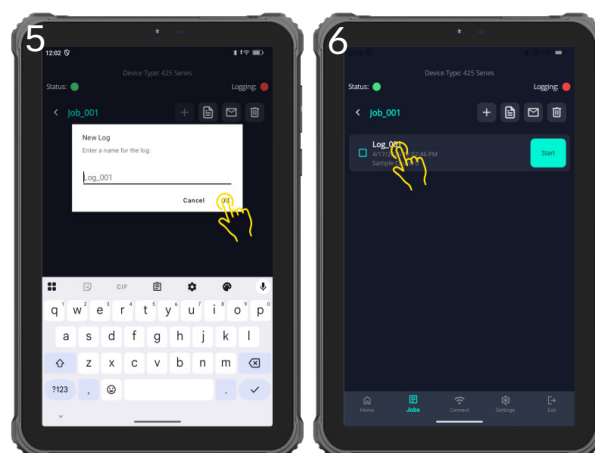

# 425 Series

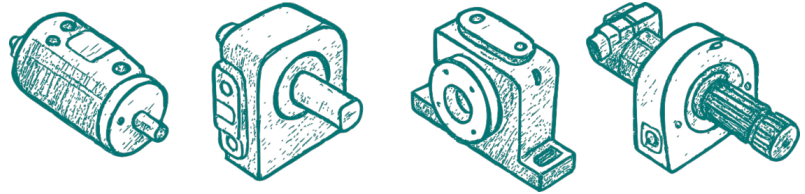 




## Deleting Jobs and Logs

To delete a log, tap the bin icon (  )<sup>1</sup>, then confirm with **Delete**<sup>2</sup>.


Multi-select<sup>3</sup> allows users to delete multiple logs at the same time.

To delete a Job, select its checkbox<sup>4</sup> before tapping the bin icon (  )<sup>5</sup>.

   Deleting a Job will also delete all its corresponding Logs. Confirm with **Delete**<sup>6</sup>.

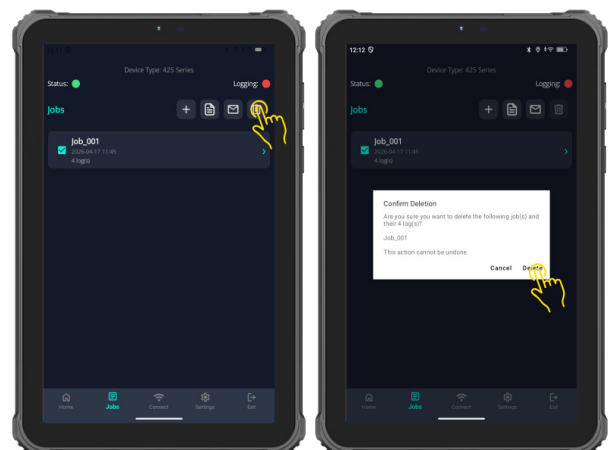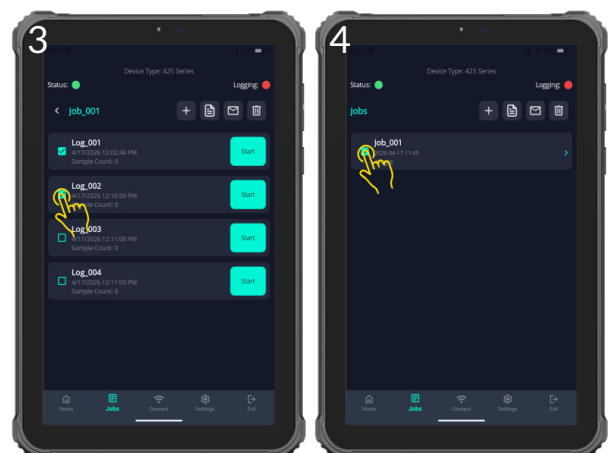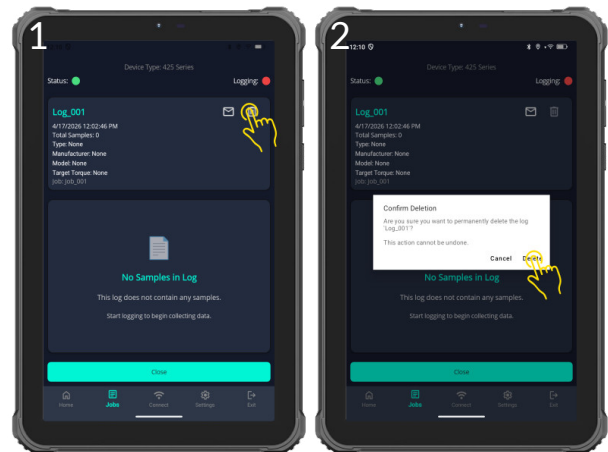

# 425 Series

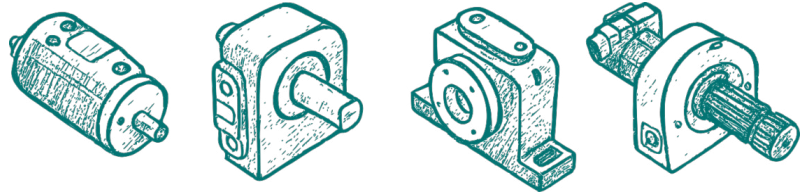 


## Renaming Logs

To rename a Log, select its name<sup>1</sup> to bring up the editor. Finalise your changes with the tick icon<sup>2</sup> (✓).

## Configuring Log Metadata


Individual Logs can be configured with metadata which will appear in generated Reports.

 To edit a Log's metadata, tap on its existing values<sup>3</sup>. Confirm your changes with the tick icon<sup>4</sup> (✓).

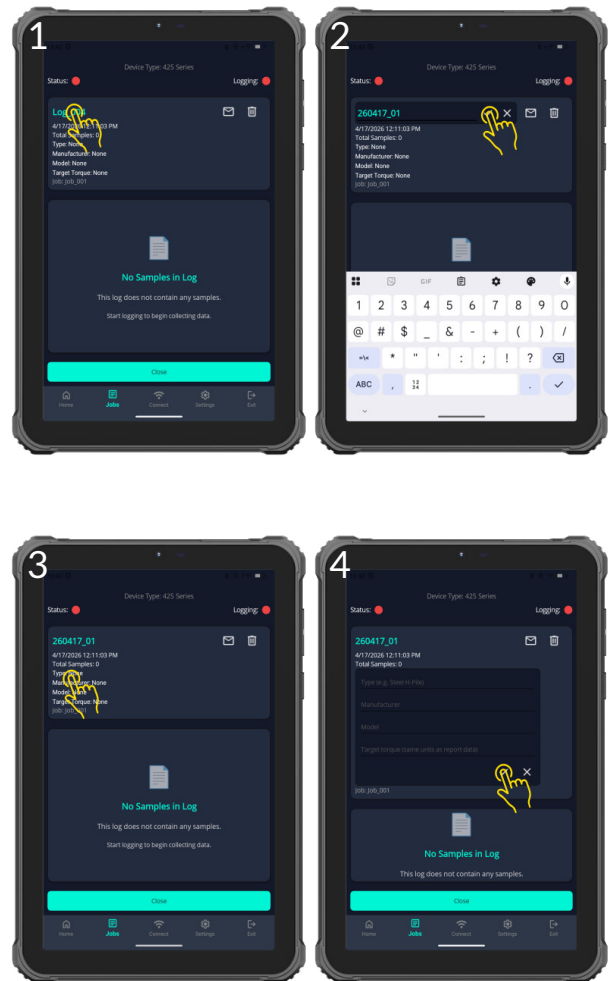



# 425 Series

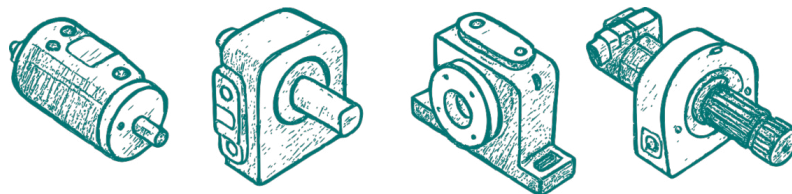 

## Recording Logs

Tap the **Start** button<sup>1</sup> to begin logging.

The top-right Logging icon will turn green while logging is active.

To stop logging, tap the **Stop** button<sup>2</sup>.

 
Logs can be resumed at any time.



## Viewing Logged Data

Logged data is displayed underneath the Log name and metadata<sup>3</sup>.


This cannot be viewed while the Log is active<sup>4</sup>.

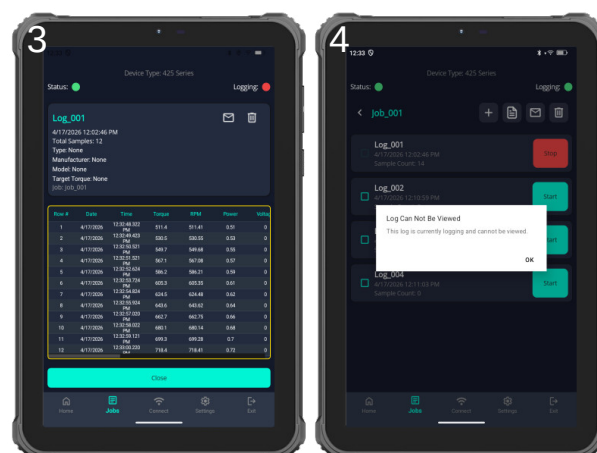


## Viewing Live Data

Live data can be viewed on the Home Tab<sup>5</sup>.

 Swipe left to view data in Graph View<sup>6</sup>.

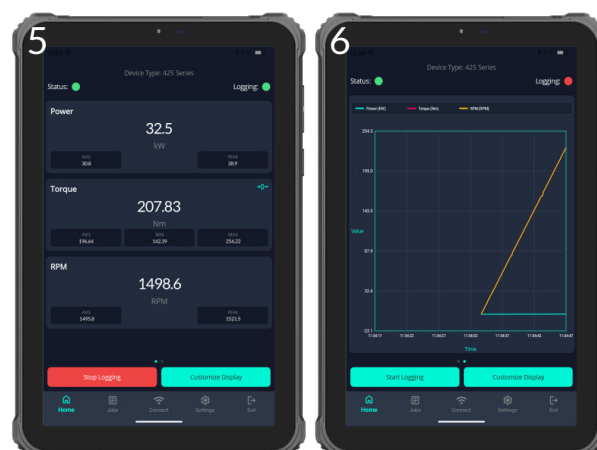

# 425 Series

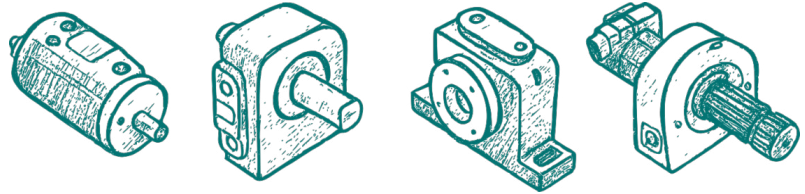 

## Reporting

Reports can be generated for individual Logs, or for all Logs within a Job.

To generate a Job Report, tap the Report icon (📄)<sup>1</sup>. This will generate Report preview which can be scrolled through by the user.

To export the .pdf Report, tap the Email icon (✉️)<sup>2</sup>.

 
 
 
For Android devices this will bring up the Share menu, enabling users to choose whether their Report is exported via Email, cloud storage, or to nearby devices using Bluetooth<sup>3</sup>.

iOS and Windows devices will open the default email browser<sup>4</sup>.


To generate Log Reports individually, use the checkboxes to select your chosen Logs<sup>5</sup>.

This generates a Report using only those Logs selected<sup>6</sup>.

**NB:** As the system connects over Wi-Fi, you'll need to disconnect unless your device supports simultaneous use of Wi-Fi and mobile data.

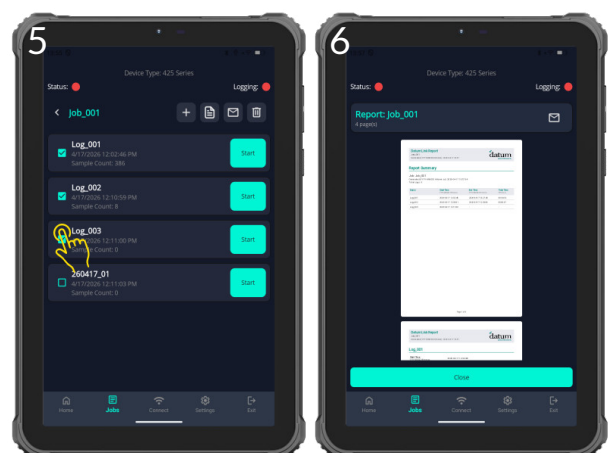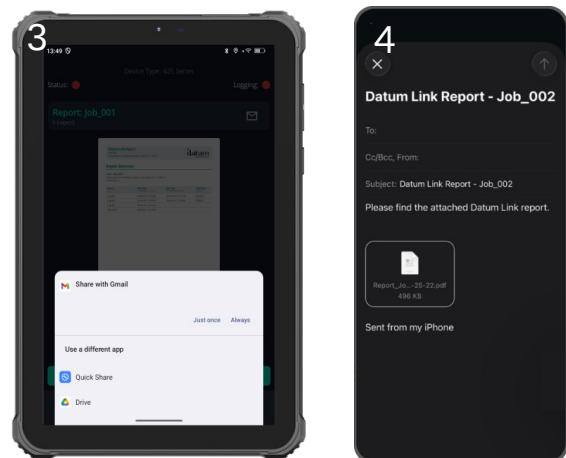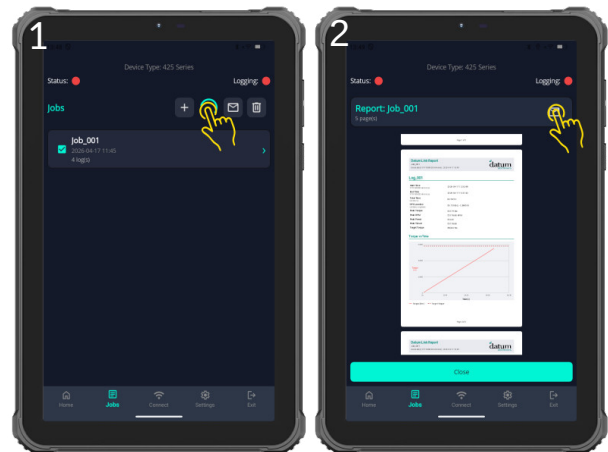


# 425 Series

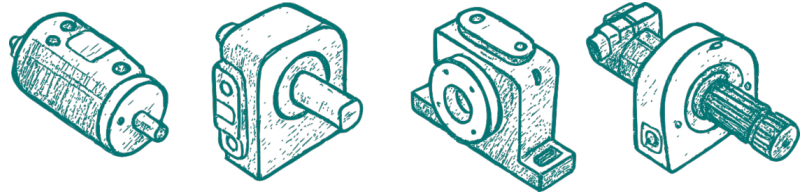 

## Exporting Data Files


Datum Link enables users to export their data as .csv or .ssv files, which can then be opened on any device running modern spreadsheet applications such as Microsoft Excel and Google Sheets.

 To export data, tap the Email icon (✉️)<sup>1</sup>.

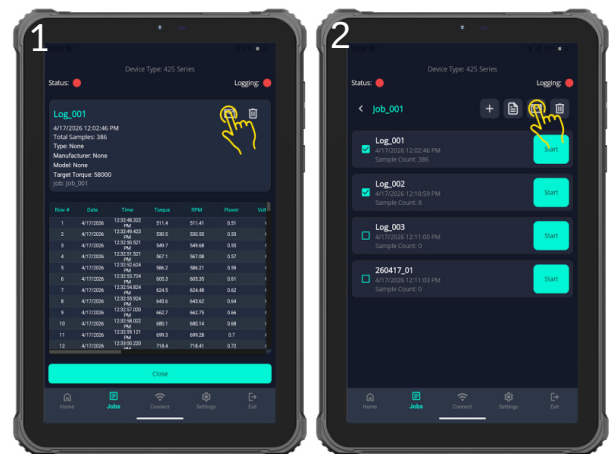


Data Files can be exported from individual Logs, multiple selected Logs<sup>2</sup>, or from all Logs within a Job<sup>3</sup>.

 For Android devices this will bring up the Share menu, enabling users to choose whether their files are exported via Email, cloud storage, or to nearby devices using Bluetooth<sup>4</sup>.

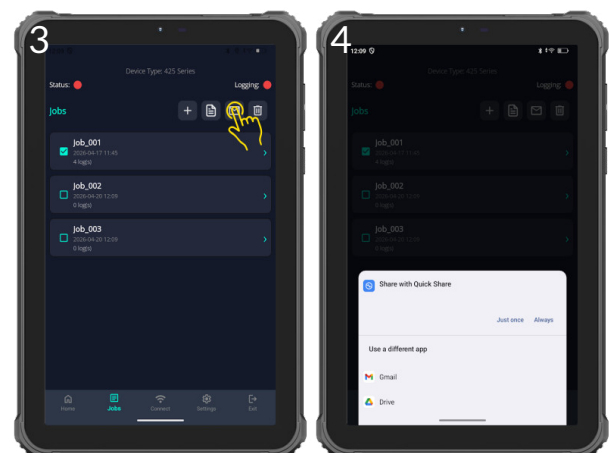


iOS and Windows devices will open the default email browser<sup>5</sup>.

 **NB:** As the system connects over Wi-Fi, you'll need to disconnect unless your device supports simultaneous use of Wi-Fi and mobile data.

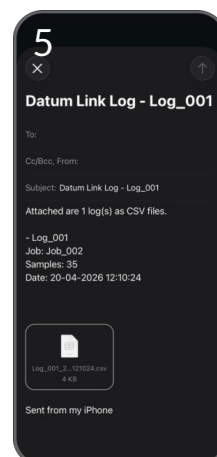


# 425 Series

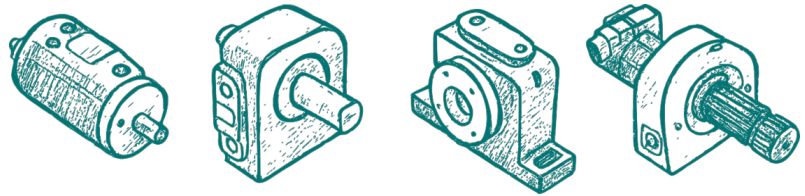 

## Settings

 The Settings Tab lets you customise the behaviour of Datum Link.

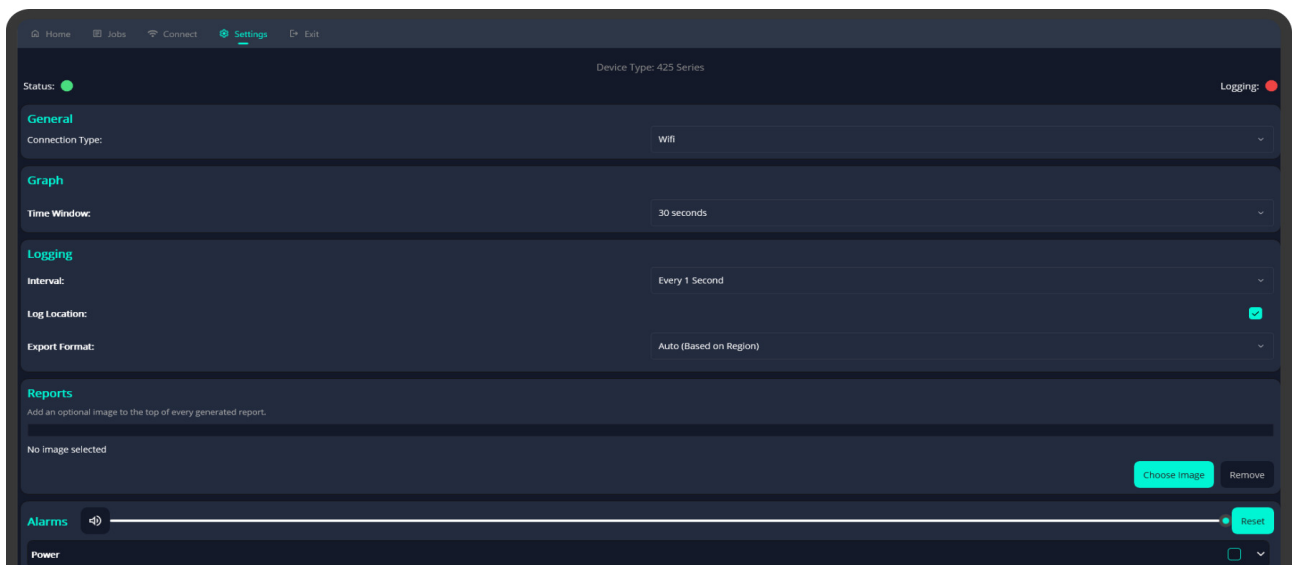

### Connection Type

Use for switching between Wi-Fi or USB-Serial connection types.

### Export Format

Tap to select either .csv or .ssv as your chosen export file format.

### Graph Time Window

Adjusts the length of time displayed on the Home Tab's Graph View.

### Report Image

Allows the user to upload a custom image to feature in Report headers.

### Logging Interval

 
By default set to every 1 second, can be changed to every 5 or 10 seconds.

We recommend using .png files for supported transparency, though other standard image formats are accepted.

### Log Location

Activates the location tracking feature to log your device's coordinates.

# 425 Series

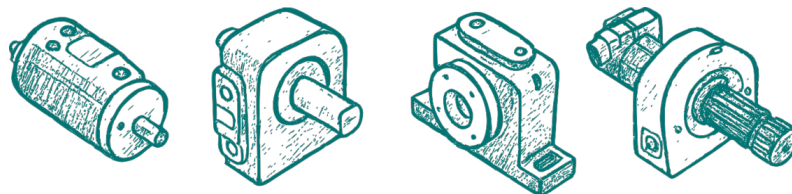


## Alarms & Warnings

These settings enable you to configure on device alerts that are designed to help prevent potential harm to personnel and equipment.

Settings include:

### On/Off Toggle<sup>1</sup>

 Activates and deactivates the alert.

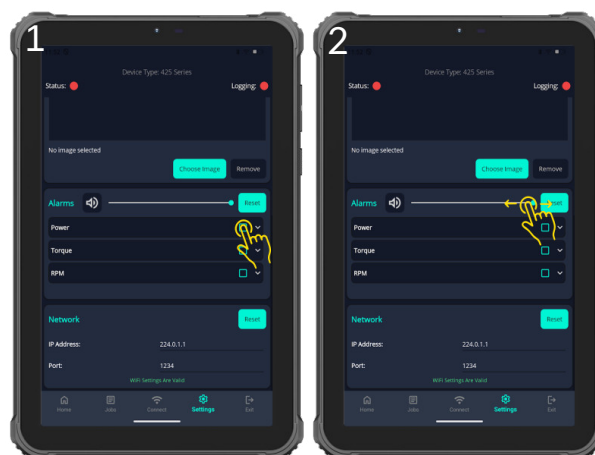


### Volume Slider<sup>2</sup>

Adjusts the volume of the alert.

### Warning Value<sup>3</sup>

 Displays an amber warning on the Home Tab when the value is met.

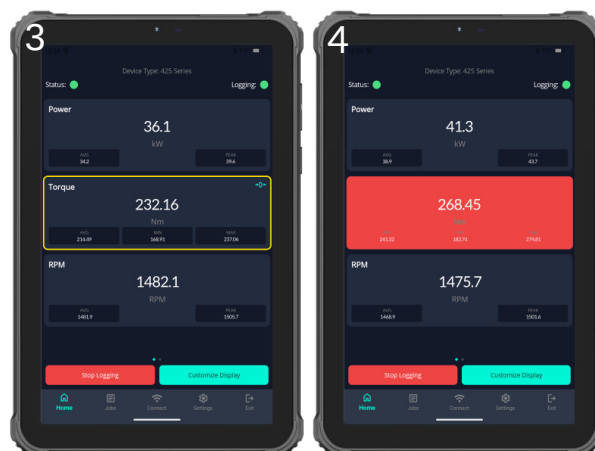


### High Value<sup>4</sup>

Displays a red warning on the Home Tab and plays an audible alarm when the value is met.


### Reset Button<sup>5</sup>

 Resets the warning and high values of each alert.

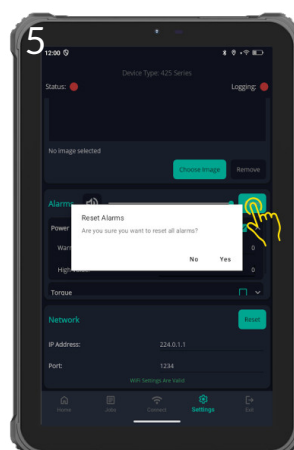

**NB:** Please ensure your device is not muted or the volume is not too low as this will affect the volume of the alarm.

# 425 Series

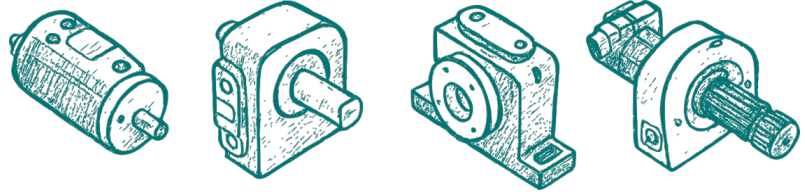 

## Device Settings: Wi-Fi

Within the Settings Tab, **Device Settings** allows users to customise their analogue outputs among other features including:

 
**Device Name:** helpful when using multiple Datum Link compatible sensors.

**Device Calibration (N):** preconfigured by Datum Electronics.

**Device Calibration (mV/V)** (non-editable)


**Power, Torque, & Speed Analog Output:**

- 5V
- 10V
- +/- 5V
- +/-10V
- 4 to 20mA
- 0 to 20mA
- 12 +/- 8mA

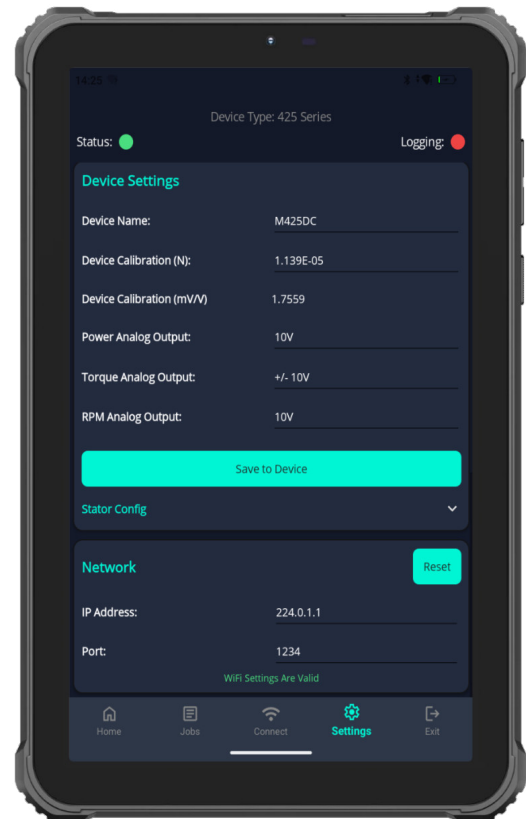




# 425 Series

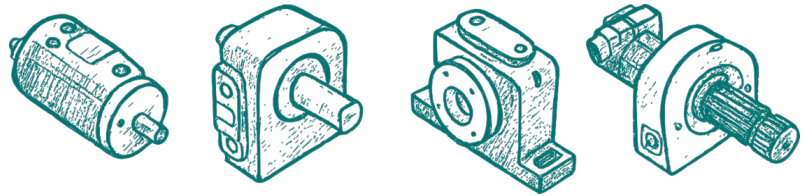 

## Device Settings: USB-Serial (Windows 11 only)

 Within the Settings Tab, Serial Settings allows users to customise:

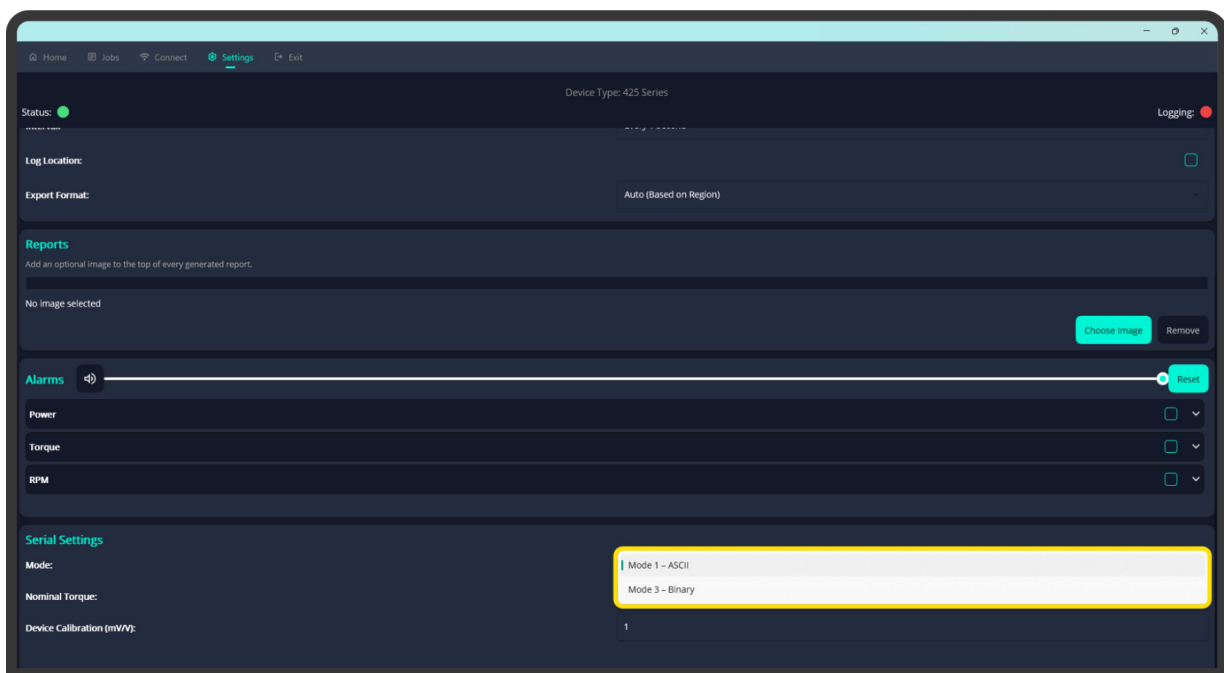


**Mode:** Datum Link supports two communication modes: Mode 1 (ASCII) and Mode 3 (Binary).

**Nominal Torque:** consult your product documentation for this value.

**Device Calibration (mV/V):** consult your product documentation for this value.

**NB:** in USB-Serial mode, settings are saved to the Windows PC. If switching between multiple PCs, ensure all share the same settings and zero offset.

# 425 Series

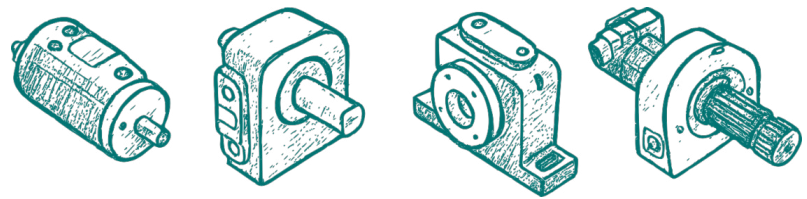 


## Customising the Home Tab

The Home Tab can be customised in the following ways:

**Data Cards** can be rearranged with click and drag.

**Graph View** data series can be hidden by clicking on the series name.

 The **Customize Display** button opens Data Card settings and controls.

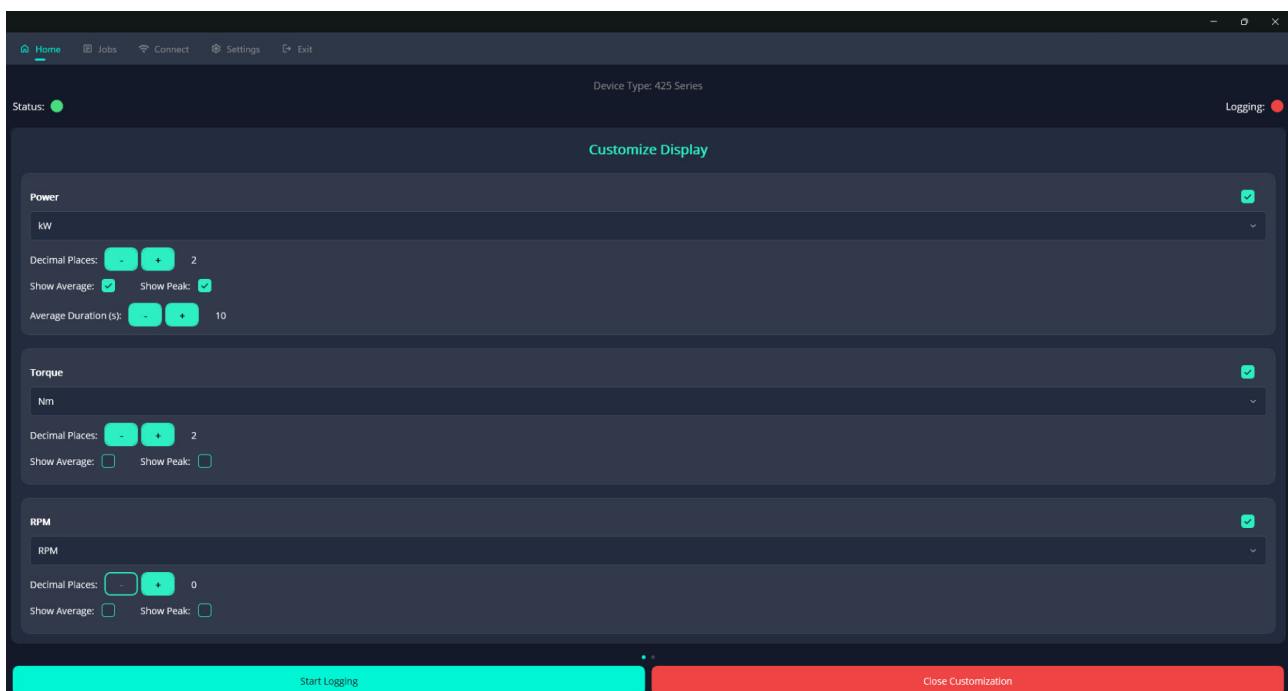

### On/Off Toggle

Adds or removes the data card.

### Show Average

Displays the average value.

### Change Units

Choose from a range of metric and imperial units.

### Average Duration (s)

Sets the period of time in seconds for which the average is calculated.

### Decimal Places

Adjusts the number of decimals places.

### Show Peak

Displays the peak values.



---

PRECISION. DATA. INNOVATION.



Rev. B

Contact Us

---

[datum-electronics.com](https://datum-electronics.com)

